


PT-22GS-RB

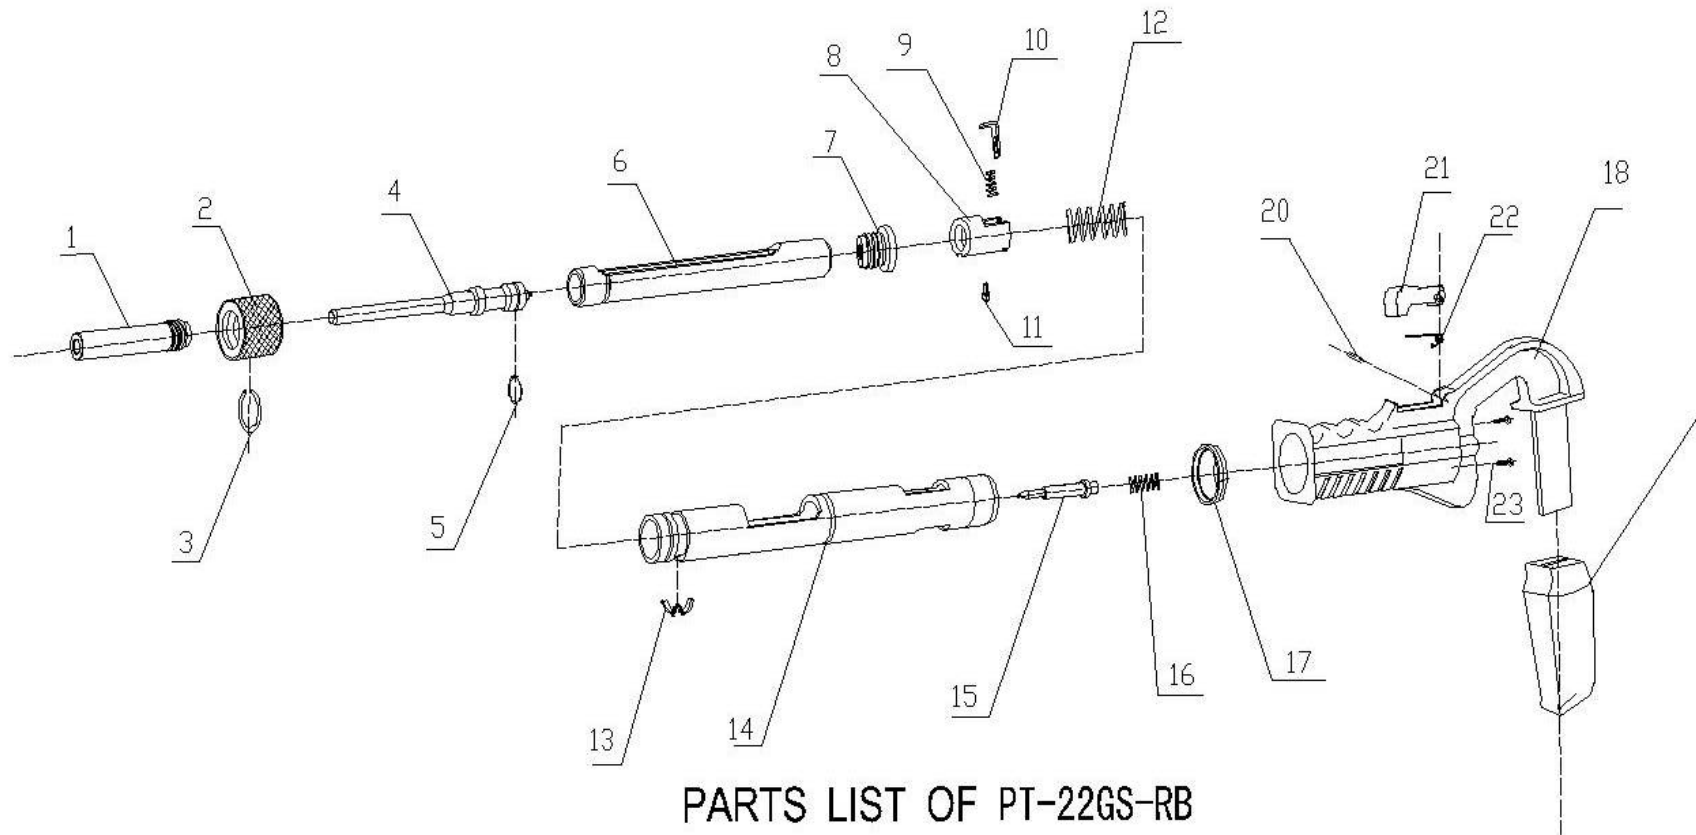

PARTS LIST OF PT-22GS-RB

- | | | |
|------------------|----------------------------|--------------------|
| 1. GUIDE | 9. GUSRD SPRING | 17. FIXING RING |
| 2. SCREW | 10. SEAR | 18. HANDLE |
| 3. CLIP SHEAR | 11. FIXING PIN | 19. RUBBER HANDLE |
| 4. PISTON | 12. MAIN SPRING | 20. SPRING PIN |
| 5. PISTON RING | 13. SPACING BLOCK | 21. TRIGGER |
| 6. PISTON SLEEVE | 14. BARREL HOUSING SELEEVE | 22. TRIGGER SPRING |
| 7. BREECH | 15. FIRING PIN | 23. NUT |
| 8. SEAR PLATE | 16. FIRING PIN SPRING | |